

E-Star Power Development Co., Ltd. (E-STAR)

1F., No.40, Juren Ln., Sec. 2, Sanmin Rd., Banciao Dist., New Taipei City

22069, Taiwan (R.O.C.)

Phone: 886-2-2957 5580 Fax: 886-2-2957 7473

150W Open Frame type Medical power supply > HBU100F

HBU100 F series

The HBU100 F series of AC/DC switching mode power supplies provide 150 Watts of continuous output power . All supplies are UL94V-1 min compliant. All models meet FCC Part-18, CISPR-11 and EN55011 class B emission Limits, IEC 60601-1-2:2014 and are designed to comply with UL/cUL, TUV T-mark and conformity assessment in CE marking. All units are 100% burned in and tested.







APPROVALS:



150W Open Frame Medical Grade Power Supply

FEATURES:

- * Wide operating voltage, 90 to 260 VAC, 47 to 63 Hz
- * Single output
- * Crowbar mode over voltage protection
- * Over temperature protection
- * Size : 2"x4"x1.02"
- * Input to output : 2MOPP
- * High ESD immunity
- * Suitable professional healthcare facility
- * 3 year warranty

APPLICATIONS:

- * Patient Monitor
- * Ultrasound system
- * Portable medical device
- * Blood chemistry analyzer
- * Medical Image

GENERAL SPECIFICATION:

- * Short Circuit Protection: Auto Recovery
- * Cooling: 150W with fan 20 CFM
- * Flammability Rating: UL94V-1
- * Protection Classes: Class I
- * Safety: IEC60601-1 Edition3.1, ES60601-1:2005(R2012), CSAC22.2 NO.60601-1:14, EN60601-1:2006/A1:2013







Symbol	Characteristic	Condition	Min.	Тур.	Max.	Unit
Vins	Safety Approval Input Voltage Range	Safety Approval & Specification in Label	100		240	VAC
Vin	Input Operate Voltage Range	Detail to see Fig.1	90		260	VAC
Fi	Input Frequency	Sine wave	47		63	Hz
PF	Power Factor Correction		0.90		1	
Po	Output Power Range	See Rating Chart			150	W
Iil	Low Line Input Current	100% Load & 150% Load(with fan 20 CFM), Vin=100VAC		1.4	2.3	Α
Iih	High Line Input Current	100% Load & 150% Load(with fan 20 CFM), Vin=240VAC		0.7	1	Α
Irl	Low Line Input Inrush Current	Full Load, 25°C, Cool start, Vin=100VAC			50	Α
Irh	High Line Input Inrush Current	Full Load, 25°C, Cool start, Vin=240VAC			100	Α
Ik	Safety Ground Leakage Current	Vin=240VAC, Fi=60Hz			0.25	mA
η	Efficiency	Full Load, Vin=230VAC, Detail to see Rating Chart	Se	See Rating Chart		
△Voi	Line Regulation	Full Load, Vin=100~120VAC or 200~240VAC				%
OVP	Over Voltage Protection		112		132	%
OLP	Over Load Protection	Recovers automatically after fault condition is removed	110		150	%
ttr	Time of Transient Response	Io=Full Load to Half Load, Vin=110VAC			4	ms
thu	Hold-Up Time	Full Load, Vin=110VAC	Se	ee Rati	ng Char	rt
ts	Start-up time	Full Load, Vin=100~240VAC			0.5	s
Ris	Insulation Resistance		50			MΩ
Тс	Temperature Coefficient	All Condition			±0.04	%/°C
HV	Dielectric Withstanding Voltage (P-S)	Primary to Secondary, limit current <10mA	4000			VAC
Vpg	Dielectric Withstanding Voltage (P-G)	Primary to PE, limit current <10mA	2015			VAC
EMI	EMC Emission	Compliance to EN55011 (CISPR11), EN60601-1-2	В			Class

Environmental:

Symbol	Characteristic	Condition	Min.	Тур.	Max.	Unit
То	Operating Temperature	-10	ó	70	°C	
Ts	Storage Temperature	10 ~ 95% RH	-40		85	°C
Но	Operating Humidity	non-condensing	0		95%	RH
Hs	Storage Humidity		0		95%	RH
ESDa	Electro Static Discharge	Air Discharge, IEC61000-4-2			15	kV
ESDc	Electro Static Discharge	Contact Discharge, IEC61000-4-2			8	kV
MTBF	Mean Time Between Failure	Operating Temperature at 25°C, Calculated per MIL-HDBK-217F	200k			h
ELEV	Operating Altitude (Elevation)	All condition			3000	m
VBR	Vibration	10 ~ 500Hz, 10min./1cycle, 60min. each along X, Y, Z axes			5	G
Vsl	Surge Voltage	Line-Neutral			1	kV
Vsg	Surge Voltage	Line-PE & Neutral-PE			2	kV



E-Star Power Development Co., Ltd. (E-STAR)

1F., No.40, Juren Ln., Sec. 2, Sanmin Rd., Banciao Dist., New Taipei City

22069, Taiwan (R.O.C.)

Phone: 886-2-2957 5580 Fax: 886-2-2957 7473

150W Open Frame type Medical power supply > HBU100F


HBU100 F series

V1.4


SPECIFICATION NOTE:


- Output can provide up to peak load when the power supply starts up.
 Continuous staying in more than rated load is not allowed.
- At factory, in 60% rated load condition, each output is checked to be within voltage accuracy.
- 3. Line regulation is defined by changing $\pm 10\%$ of input voltage from nominal line at rated load.
- 4. Load regulation is defined by changing $\pm 40\%$ of measured output load from 60% rated load.
- The ripple is measured from peak to peak with a bandwidth-limit of 20MHz (Measured at the output connector with a 0.1uF ceramic capacitor and a 47uF electrolytic capacitor).
- 6. Hold up time is measured from the end of the last charging pulse to the time which the main output drops down to low limit of main output at rated load and nominal line.
- 7. Efficiency is measured at rated load, and nominal line.

MECHANICAL DIMENSIONS: (UNIT: mm)

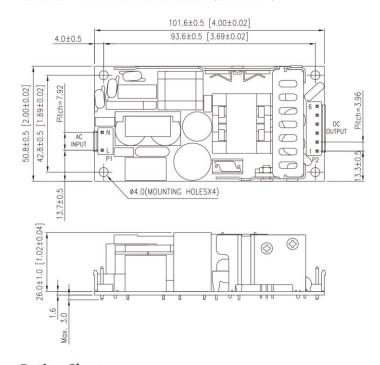

150W Open Frame Medical Grade Power Supply

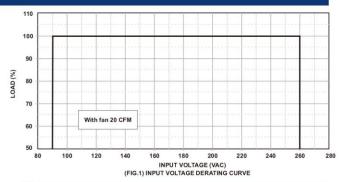

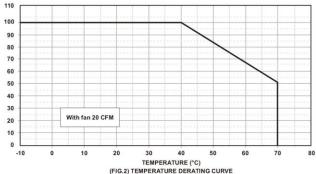

PACKING:

- 1. Net weight: 180~250g approx.
- Input connector mates with JST housing VHR-3N and JST SVH series crimp terminal..
- 3. Output connector mates with JST housing VHR-6N and JST SVH series crimp terminal.

PIN CHART

MODEL PIN	1	2	3	4	5	6
HBU100-1XXF	OUT	оит	OUT	RTN	RTN	RTN

Rating Chart:

MODEL NO.	Voltage Range		Output Current (Based on the output volt.)		Maximum Output Power (Forced Air)	Ripple & No	Total Regulation	Typ. Efficiency	Typ. No Load Consumption	Hold-Up T	Protection
	min max	max	(with fan cooling)		ir) eq n	Noise	itio	псу	Load	Time	Mode
			min	max				(0.1)	(111)		ode
	(VDC)	(VDC)	(A)	(A)	(W)	(mVp-p)	(%)	(%)	(W)	(ms)	
HBU100-105F	11.0	13.0	11.53	13.63	150	200	±3	86	0.5	8	Hiccup
HBU100-106F	13.0	16.0	9.37	11.53	150	300	±3	86	0.5	8	Hiccup
HBU100-107F	16.0	21.0	7.14	9.37	150	300	±3	87	0.5	8	Hiccup
HBU100-108F	21.0	27.0	5.55	7.14	150	300	±3	88	0.5	8	Hiccup
HBU100-109F	27.0	33.0	4.54	5.55	150	300	±3	88	0.5	8	Hiccup
HBU100-110F	33.0	40.0	3.75	4.54	150	300	±3	88	0.5	8	Hiccup
HBU100-111F	40.0	50.0	3.00	3.75	150	300	±3	88	0.5	8	Hiccup