

E-Star Power Development Co., Ltd. (E-STAR)

1F., No.40, Juren Ln., Sec. 2, Sanmin Rd., Banciao Dist., New Taipei City

22069, Taiwan (R.O.C.)

Phone: 886-2-2957 5580 Fax: 886-2-2957 7473

50W Open Frame type Medical power supply > HBU50

HBU50 series

V1.5

The HBU50 series of AC/DC switching mode power supplies provide 50 Watts of continuous output power . All supplies are UL94V-1 min compliant. All models meet FCC Part-18, CISPR-11 and EN55011 class B emission Limits, IEC 60601-1-2:2014 and are designed to comply with UL/cUL, TUV T-mark and conformity assessment in CE marking. All units are 100% burned in and tested.



50W Open Frame Medical Grade Power Supply

FEATURES:

- * Wide Operating Voltage, 80 to 275 VAC, 47 to 63 Hz
- * Single Output
- * Over Load protection
- * Input to Output: 2MOPP
- * Size : 1"x4"x1.28"
- * High ESD immunity
- * Suitable professional healthcare facility
- * 3 year warranty



APPLICATIONS:

- * Breathing Therapy Device
- * Blood Pressure system
- * Portable medical device
- * ECG \ EEG
- * Medical Tablet

GENERAL SPECIFICATION:

- * Short Circuit Protection: Auto Recovery
- * Cooling: Free Air Convection
- * Flammability Rating: UL94V-1
- * Class of equipment: Double insulated, Class II
- * Safety: IEC60601-1 Edition3.1, ES60601-1:2005(R2012), CSAC22.2 NO.60601-1:14, EN60601-1:2006/A1:2013



APPROVALS:



Electrical Characteristics:

Symbol	Characteristic	Condition	Min.	Тур.	Max.	Unit
Vins	Safety Approval Input Voltage Range	Safety Approval & Specification in Label	100		240	VAC
Vin	Input Operate Voltage Range	Detail to see Fig.1 (Derate linearly from 100% load at 90VAC to 80% load at 80VAC)	80		275	VAC
Fi	Input Frequency	Sine wave	47		63	Hz
Po	Output Power Range	See Rating Chart			50	W
Iil	Low Line Input Current	Current Full Load, Vin=100VAC		1.2		Α
Iih	High Line Input Current	Full Load, Vin=240VAC		0.7		Α
Irl	Low Line Input Inrush Current	Full Load, 25°C, Cool start, Vin=100VAC			40	Α
Irh	High Line Input Inrush Current	nrush Current Full Load, 25°C, Cool start, Vin=240VAC			80	Α
η	Efficiency	Full Load, Vin=230VAC, Detail to see Rating Chart	See Rating Chart			t
△Voi	Line Regulation	Full Load, Vin=100~120VAC			1	%
OLP	Over Load Protection	rotection Recovers automatically after fault condition is removed			150	%
ttr	Time of Transient Response	Fransient Response Io=Full Load to Half Load, Vin=100VAC			4	ms
thu	Hold-Up Time	Full Load, Vin=110VAC	See Rating Chart			t
ts	Start-up time	time Full Load, Vin=100~240VAC			2	S
Тс	Temperature Coefficient	All Condition			±0.04	%/°C
HV	Dielectric Withstanding Voltage (P-S)	Primary to Secondary, limit current <10mA			4000	VAC
EMI	EMC Emission	Compliance to EN55011 (CISPR11), EN60601-1-2	В			Class

Environmental:

Symbol Characteristic		Condition	Min.	Тур.	Max.	Unit
То	Operating Temperature	Detail to see Fig.2 (Derate linearly from 100% load at 40°C to 50% load at 70°C)	-10		70	°C
Ts	Storage Temperature	10~95% RH			85	°C
Но	Operating Humidity	non-condensing			95%	RH
Hs	Storage Humidity		0		95%	RH
ESDa	Electro Static Discharge	arge Air Discharge, IEC61000-4-2			15	kV
ESDc	Electro Static Discharge	Electro Static Discharge Contact Discharge, IEC61000-4-2			8	kV
MTBF	Mean Time Between Failure	ean Time Between Failure Operating Temperature at 25°C, Calculated per MIL-HDBK-217F				h
ELEV	Operating Altitude (Elevation)	perating Altitude (Elevation) All condition			3000	m
VBR	Vibration	10 ~ 500Hz, 10min./1cycle, 60min. each along X, Y, Z axes			5	G
Vsl	Surge Voltage	Line-Neutral			1	kV
Vsg	Surge Voltage	Line-PE & Neutral-PE			2	kV



E-Star Power Development Co., Ltd. (E-STAR)

1F., No.40, Juren Ln., Sec. 2, Sanmin Rd., Banciao Dist., New Taipei City

22069, Taiwan (R.O.C.)

Phone: 886-2-2957 5580 Fax: 886-2-2957 7473

50W Open Frame type Medical power supply > HBU50


HBU50 series


V1 5

SPECIFICATION NOTE:


- Output can provide up to peak load when the power supply starts up.
 Continuous staying in more than rated load is not allowed.
- At factory, in 60% rated load condition, each output is checked to be within voltage accuracy.
- 3. Line regulation is defined by changing $\pm 10\%$ of input voltage from nominal line at rated load.
- 4. Load regulation is defined by changing $\pm 40\%$ of measured output load from 60% rated load.
- The ripple is measured from peak to peak with a bandwidth-limit of 20MHz (Measured at the output connector with a 0.1uF ceramic capacitor and a 47uF electrolytic capacitor).
- Hold up time is measured from the end of the last charging pulse to the time which the main output drops down to low limit of main output at rated load and nominal line.
- 7. Efficiency is measured at rated load, and nominal line.


MECHANICAL DIMENSIONS: (UNIT: mm)

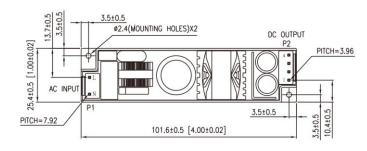

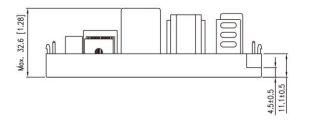

50W Open Frame Medical Grade Power Supply

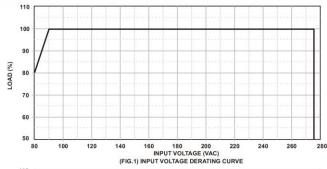

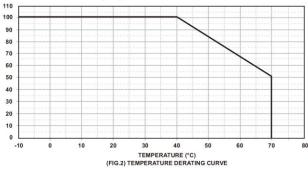

PACKING:

- 1. Net weight: 75g approx.
- Input connector mates with JST housing VHR-3N and JST SVH series crimp terminal.
- Output connector mates with JST housing VHR-4N and JST SVH series crimp terminal.

PIN CHART

MODEL PIN	1	2	3	4	
HBU50-1XX	OUT	OUT	RTN	RTN	

Rating Chart:

MODEL NO.		ltage Range can't be adjusted)		Current output volt.)	Maximum Output Power	Ripple	& Noise	Typ. No Load Consumption Typ. Efficiency Typ. Efficiency Total Regulation		Typ. No Load Consumption	Hold-Up Time	Protection
	min (VDC)	max (VDC)	min (A)	max (A)	(W)	min (mVp-p)	max (mVp-p)	tion (%)	(%)	(W)	ne	Mode
											(ms)	
HBU50-102	5.0	6.0	5.00	6.00	30	50	60	±5	79	0.10	12	Hiccup
HBU50-103	6.0	8.0	5.00	6.66	40	60	80	±5	80	0.10	12	Hiccup
HBU50-104	8.0	11.0	4.09	5.00	45	80	110	±5	85	0.10	12	Hiccup
HBU50-105	11.0	13.0	3.84	4.17	50	110	130	±5	87	0.15	12	Hiccup
HBU50-106	13.0	16.0	3.12	3.84	50	130	160	±5	87	0.15	12	Hiccup
HBU50-107	16.0	21.0	2.38	3.12	50	160	210	±5	88	0.15	12	Hiccup
HBU50-108	21.0	27.0	1.85	2.38	50	210	270	±3	88	0.15	12	Hiccup
HBU50-109	27.0	33.0	1.51	1.85	50	270	330	±3	88	0.15	12	Hiccup
HBU50-110	33.0	40.0	1.25	1.51	50	330	400	±3	88	0.15	12	Hiccup
HBU50-111	40.0	50.0	1.00	1.25	50	400	500	±3	88	0.15	12	Hiccup